



NUMBER	PART NAME-HONDA#	QTY NEEDED
01	GUIDE, SEAL RING 22485-393-010	001
02	CLUTCH ASSY., LOW 22500-393-000	001
03	PISTON, CLUTCH 22530-639-000	001
04	SEAT, CLUTCH SPRING 22533-639-000	001
05	SPRING 22534-639-000	001
06	DISK, CLUTCH 22535-639-505	004
06	DISK, CLUTCH 22535-639-505	004
07	PLATE, CLUTCH 22536-639-000	004
08	PLATE (1.8MM) 22551-612-000	001
08	PLATE (2.1MM) 22552-612-000	001
08	PLATE (2.4MM) 22553-612-000	001
08	PLATE (2.7MM) 22554-612-000	001
08	PLATE (3.0MM) 22555-612-000	001
08	PLATE (3.3MM) 22556-639-000	001
09	RING (52MM) 22628-393-003	002
10	SHAFT, INPUT 23110-393-010	001
11	RING, SEALING (20MM) 23122-393-003	001

12	MAINSHAFT, TRANS 23211-393-300	001
13	GEAR (19T & 38T) 23411-393-000	001
14	PIN 24261-283-000	001
15	SHAFT, STATOR 25150-393-010	001
15	SHAFT, STATOR 25150-393-010	001
16	RING (30MM) 25156-393-003	001
17	WASHER (20X33.5X2) 90403-393-000	001
18	WASHER (30X44X2) 90404-393-000	001
18	WASHER (30X44X1.5) 90404-393-010	001
19	WASHER (24X36X2) 90409-393-000	001
20	CIRCLIP (36MM) 90602-639-000	001
21	RING (6009NS) 90603-393-000	001
22	CIRCLIP (103.5X1.5) 90608-612-000	001
23	BEARING (20X24X17) 91011-393-008	001
24	BEARING (26X30X17) 91012-393-008	001
25	BEARING (30X35X20) 91014-393-008	001
26	BEARING (24X28X17) 91017-393-008	001
27	NEEDLE (20X35X4) 91024-393-008	001
28	OIL SEAL (53X75X8) 91204-393-003	001
29	O-RING (4.9X2.5) 91301-426-010	001
29	O-RING (4.9X2.5) 91301-426-010	001
30	O-RING (32X1.9) 91302-639-000	001
31	O-RING (88X2.2) 91308-612-005	001
32	O-RING, PINION CAP 91351-642-000	001
33	BEARING (6304Z) 96120-63040-10	001
33	BEARING (6304Z) 96120-63040-10	001