



NUMBER	PART NAME-HONDA#	QTY NEEDED
01	GASKET; 11397-300-306;	001
02	COVER, ALTERNATOR; 11631-300-040;	001
03	GEAR; 28101-300-000;	001
04	SHAFT; 28106-300-000;	001
05	PLATE; 28109-300-000;	001
06	GEAR, STARTER CLUTCH; 28110-300-000;	001
07	CLUTCH, STARTER; 28120-300-000;	001
08	SPRING; 28125-516-030;	003
09	CAP; 28126-516-020;	003
10	PLATE; 28128-516-000;	001
11	ROTOR; 31101-393-005;	001
12	STATOR; 31102-393-025;	001
12	STATOR; 31102-393-025;	001

12	STATOR; 31102-393-025;	001
13	COIL, FIELD; 31103-393-015;	001
13	COIL, FIELD; 31103-393-015;	001
14	WIRE HARNESS, ALTNTR; 31110-393-000;	001
15	PLATE; 32116-300-010;	001
16	BOLT, ROTOR SET; 90014-392-010;	001
17	SCREW, FLAT (8X22); 90053-300-000;	003
18	WASHER (11MM); 90425-300-000;	003
19	ROLLER (15X13); 91101-516-000;	003
20	OIL SEAL (25X33X4); 91215-300-003;	001
21	BOLT, HEX. (6X16); 92101-06016-0A;	001
21	BOLT, HEX. (6X16); 92101-06016-0A;	001
21	BOLT, HEX. (6X16); 92101-06016-0A;	001
21	BOLT, HEX. (6X16); 92101-06016-0A;	001
21	BOLT, HEX. (6X16); 92101-06016-0A;	001
21	BOLT, HEX. (6X16); 92101-06016-0A;	001
22	SCREW, PAN (6X20); 93500-06020-0A;	003
22	SCREW, PAN (6X20); 93500-06020-0A;	003
22	SCREW, PAN (6X20); 93500-06020-0A;	003
23	SCREW, PAN (6X28); 93500-06028-0A;	004
23	SCREW, PAN (6X28); 93500-06028-0A;	004
23	SCREW, PAN (6X28); 93500-06028-0A;	004
24	SCREW, PAN (6X32); 93500-06032-0A;	007
24	SCREW, PAN (6X32); 93500-06032-0A;	007
24	SCREW, PAN (6X32); 93500-06032-0A;	007
25	SCREW, PAN (6X35); 93500-06035-0A;	001
25	SCREW, PAN (6X35); 93500-06035-0A;	001
25	SCREW, PAN (6X35); 93500-06035-0A;	001
26	PIN, DOWEL (8X14); 94301-08140;	001