



NUMBER	PART NAME-HONDA#	QTY NEEDED
01	GUIDE, SEAL RING 22485-393-010	001
02	PISTON, CLUTCH 22530-639-000	001
03	SEAT, CLUTCH SPRING 22533-639-000	001
04	SPRING 22534-639-000	001
05	DISK, CLUTCH 22535-639-505	006
05	DISK, CLUTCH 22535-639-505	006
06	PLATE, CLUTCH 22536-639-000	006
07	PLATE (1.8MM) 22551-612-000	001
07	PLATE (2.1MM) 22552-612-000	001
07	PLATE (2.4MM) 22553-612-000	001
07	PLATE (2.7MM) 22554-612-000	001
07	PLATE (3.0MM) 22555-612-000	001
07	PLATE (3.3MM) 22556-639-000	001
08	CLUTCH ASSY., TOP 22600-393-000	001
09	RING (52MM) 22628-393-003	002
10	COUNTERSHAFT 23220-393-000	001
11	GEAR (38T & 38T) 23431-393-000	001
12	SPROCKET (15T) 23801-393-000	001

13	PLATE 23811-292-000	001
14	COLLAR (26X38X13) 23911-393-000	001
15	PIN 24261-283-000	002
16	GEAR, STARTER IDLE 28321-393-300	001
17	SUB-GEAR 28322-393-300	001
18	COLLAR 28323-393-300	001
19	SPRING, STARTER IDLE 28324-393-015	001
19	SPRING, IDLE STARTER 28324-393-025	001
20	WASHER (20X33.5X2) 90403-393-000	001
21	WASHER, SPLINE 90405-393-000	001
22	WASHER (26MM) 90407-415-000	001
23	WASHER (36X45X2) 90408-393-000	001
24	CIRCLIP (36MM) 90602-639-000	002
25	CIRCLIP (103.5X1.5) 90608-612-000	001
26	BEARING (26X30X17) 91012-393-008	002
27	BEARING (20MM) 91022-377-008	001
27	BEARING (20MM) 91022-377-008	001
28	OIL SEAL (34X62X13) 91203-393-003	001
29	OIL SEAL (34X7) 91208-393-003	001
30	OIL SEAL (34X66) 91211-393-003	001
31	O-RING (4.9X2.5) 91301-426-010	001
31	O-RING (4.9X2.5) 91301-426-010	001
32	O-RING (32X1.9) 91302-639-000	001
33	O-RING (88X2.2) 91308-612-005	001
34	BOLT, HEX. (6X12) 92101-06012-0A	002
34	BOLT, HEX. (6X12) 92101-06012-0A	002
34	BOLT, HEX. (6X12) 92101-06012-0A	002