



NUMBER	PART NAME-HONDA#	QTY NEEDED
01	PEDAL, GEARSHIFT 24701-410-000	001
02	ARM, KICK STARTER 28240-392-000	001
03	SPRING, KICK STARTER 28292-250-010	001
04	CLIP 28293-250-000	001
05	RUBBER, KICK STARTER 28311-329-000	001
06	PIN 28321-300-000	001
07	SPRING 28333-300-000	001
08	SWITCH ASSY., STOP 35350-086-721	001
09	SPRING, STOP SWITCH 35357-107-010	001
10	PEDAL, RR. BRAKE 46500-410-000	001
11	PIN, BRAKE ROD 46503-371-000	001
12	SPINDLE, RR. 46510-410-000	001
13	SPRING, BRAKE PEDAL 46514-410-770	001
14	BRACKET, STOP SWITCH 50146-410-000	001
15	WASHER (7X12) 90501-310-000	001
16	BOLT, HEX. (6X20) 92101-06020-0A	001
16	BOLT, HEX. (6X20) 92101-06020-0A	001

17	BOLT, HEX. (8X28) 92101-08028-0B	001
18	BOLT-WASHER (8X28) 93482-08028-00	001
19	WASHER, PLAIN (8MM) 94102-08200	001
20	PIN, COTTER (1.6X25) 94201-16250	001
20	PIN, COTTER (1.6X25) 94201-16250	001
21	RUBBER, CHANGE PEDAL 95011-40000	001
22	BALL (#8) (1/4) 96211-08000	001

[www.hondachopper.com](http://www.hondachopper.com)