



NUMBER	PART NAME-HONDA#	QTY NEEDED
01	REGULATOR ASSY. 31400-300-035	001
02	RUBBER 31403-323-000	002
02	RUBBER 31403-323-000	002
03	RECTIFIER ASSY. 31700-333-008	001
03	RECTIFIER ASSY. 31700-333-008	001
04	BOX ASSY., FUSE 32110-341-702	001
05	CABLE 32401-392-000	001
06	CABLE 32601-392-000	001
07	SW, STARTER MAGNETIC 35850-375-000	001
08	RUB, MAGNETIC SHOCK 35856-413-010	001
08	RUB, MAGNETIC SHOCK 35856-413-010	001
08	RUB, MAGNETIC SHOCK 35856-413-010	001
08	RUB, MAGNETIC SHOCK 35856-413-010	001
09	SUB-WIRE 35858-333-000	001
09	SUB-WIRE, MAGNETIC 35858-392-000	001
10	RELAY, TURN SIGNAL 38301-KJ6-743	001
10	RELAY, TURN SIGNAL 38301-KJ6-743	001
10	RELAY, TURN SIGNAL 38301-KJ6-743	001
10	RELAY, TURN SIGNAL 38301-KJ6-743	001
12	SUSPENSION 38306-092-670	001
14	RUBBER A, BATTERY 50323-300-010	003

15	COLLAR, BATTERY BOX 50324-300-000	003
16	BOX, BATTERY 50325-405-000	001
17	TUBE ASSY., BATTERY 50326-341-670	001
18	RUBBER B, BATTERY 50327-300-000	006
19	COLLAR 84706-286-000	002
20	BOLT, HEX. (5X14) 92101-05014-0A	002
20	BOLT, HEX. (5X14) 92101-05014-0A	002
21	BOLT-WASHER (6X20) 93404-06020-08	002
21	BOLT-WASHER (6X20) 93494-06020-08	002
21	BOLT-WASHER (6X20) 93494-06020-08	002
22	BOLT-WASHER (6X25) 93404-06025-08	003
22	BOLT-WASHER (6X25) 93404-06025-08	003
23	NUT, HEX. (6MM) 94002-06080-0S	001
23	NUT, HEX. (6MM) 94002-06080-0S	001
23	NUT, HEX. (6MM) 94002-06080-0S	001
23	NUT, HEX. (6MM) 94002-06080-0S	001
24	NUT, FLANGE (6MM) 94050-06000	001
25	NUT, FLANGE (8MM) 94050-08080	001
26	WASHER, PLAIN (5MM) 94101-05000	002
27	WASHER, SPRING (6MM) 94111-06800	001
28	BAND F, BATTERY 95012-17001	001
28	BAND F, BATTERY 95012-17001	001
28	BAND F, BATTERY 95012-17001	001
29	FUSE A (5A) 98200-10500	002
30	FUSE (7A) 98200-10700	002
31	FUSE (15A) 98200-11500	002
32	BATTERY ASSY. 31500-425-672AH	001
32	BATTERY ASSY. 31500-425-672AH	001