



NUMBER	PART NAME-HONDA#	QTY NEEDED
01	AXLE, FR. WHEEL 44301-425-870	001
01	AXLE, FR. WHEEL 44301-425-870	001
01	AXLE, FR. WHEEL 44301-425-870	001
02	COLR, FR. WHEEL SIDE 44311-371-980	001
03	HUB, FR. WHEEL 44601-405-000	001
04	BALANCER (20G) 44606-283-000	AR
04	BALANCER (15G) 44607-283-000	AR
04	BALANCER (10G) 44608-283-000	AR
04	BALANCER, WHEEL (5G) 44609-283-000	AR
05	COLLAR, FR. 44620-300-020	001
06	RETAINER, GEAR BOX 44641-375-000	001
07	COVER 44642-300-020	001
08	RETAINER, FR. 44643-300-000	001
09	RIM, FR. WHEEL 44701-405-771	001

09	RIM, FR. WHEEL 44701-405-771	001
10	TIRE, FR. (3.25H19) 44711-341-003	001
11	TUBE, TIRE 44712-371-003	001
11	TUBE, TIRE 44712-371-003	001
11	TUBE, TIRE 44712-371-003	001
11	TUBE, TIRE 44712-371-003	001
12	FLAP, TIRE 44713-MR1-671	001
12	FLAP, TIRE (1.85-19) 44713-371-004	001
12	FLAP, TIRE 44713-MR1-671	001
13	BOX ASSY. 44800-300-030	001
14	DISK, FR. BRAKE 45120-392-000	001
15	BOLT (8X102) 90122-300-020	006
16	NUT, AXLE (12MM) 90306-425-870	001
16	NUT, AXLE (12MM) 90306-425-870	001
17	NUT, HEX. (8MM) 90309-357-000	006
18	DUST SEAL (22X36X8) 91252-300-003	001
19	O-RING (58X2) 91302-300-000	001
20	SCREW, OVAL (5X16) 93700-05016-0A	001
21	BEARING (6302UU) 96150-63020-10	002
21	BEARING (6302UU) 96150-63020-10	002
22	SPOKE AS (8X203) 97451-69246-10	020
23	SPOKE BS (8X202.5) 97B11-69245-10	020